


Soldering wires to LoRa 2.1-1.6
(requires 2 wires):

1. Solder first wire to GND
2. Solder second wire to IO12

Soldering wires to user/PRG button

1. Solder one wire each to the two RIGHT or LEFT pins
- Note: wire colors do not matter*

User/PRG button functions: Short press=Cycle screen info

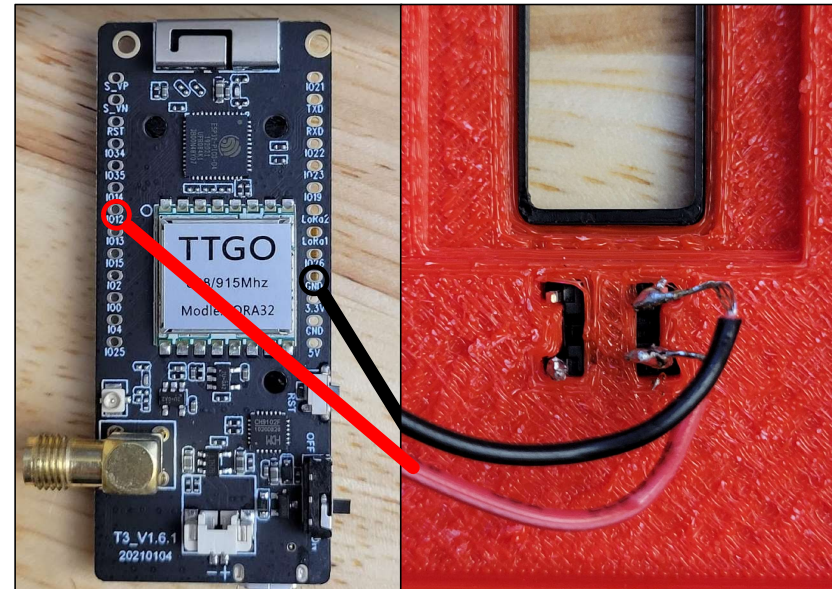


Soldering wires to LoRa 2.1-1.6
(requires 2 wires):

1. Solder first wire to GND
2. Solder second wire to IO12

Soldering wires to user/PRG button


1. Solder one wire each to the two RIGHT or LEFT pins
- Note: wire colors do not matter*

User/PRG button functions: Short press=Cycle screen info

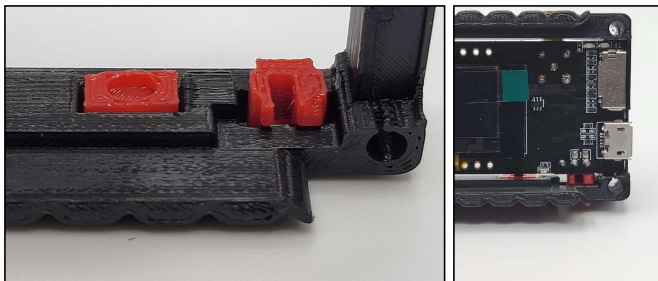

Installing the reset button (left) and power switch (right)

Note: install both before inserting LoRa board

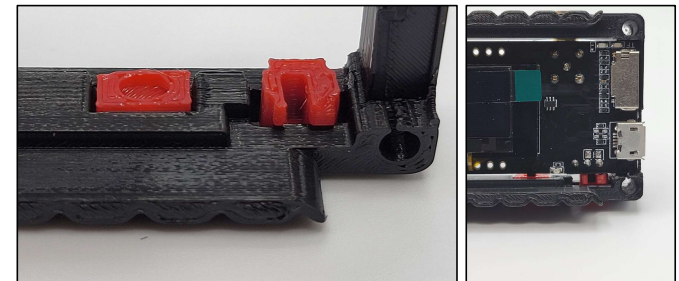

Installing the reset button (left) and power switch (right)

Note: install both before inserting LoRa board